


116GX Parts Diagram

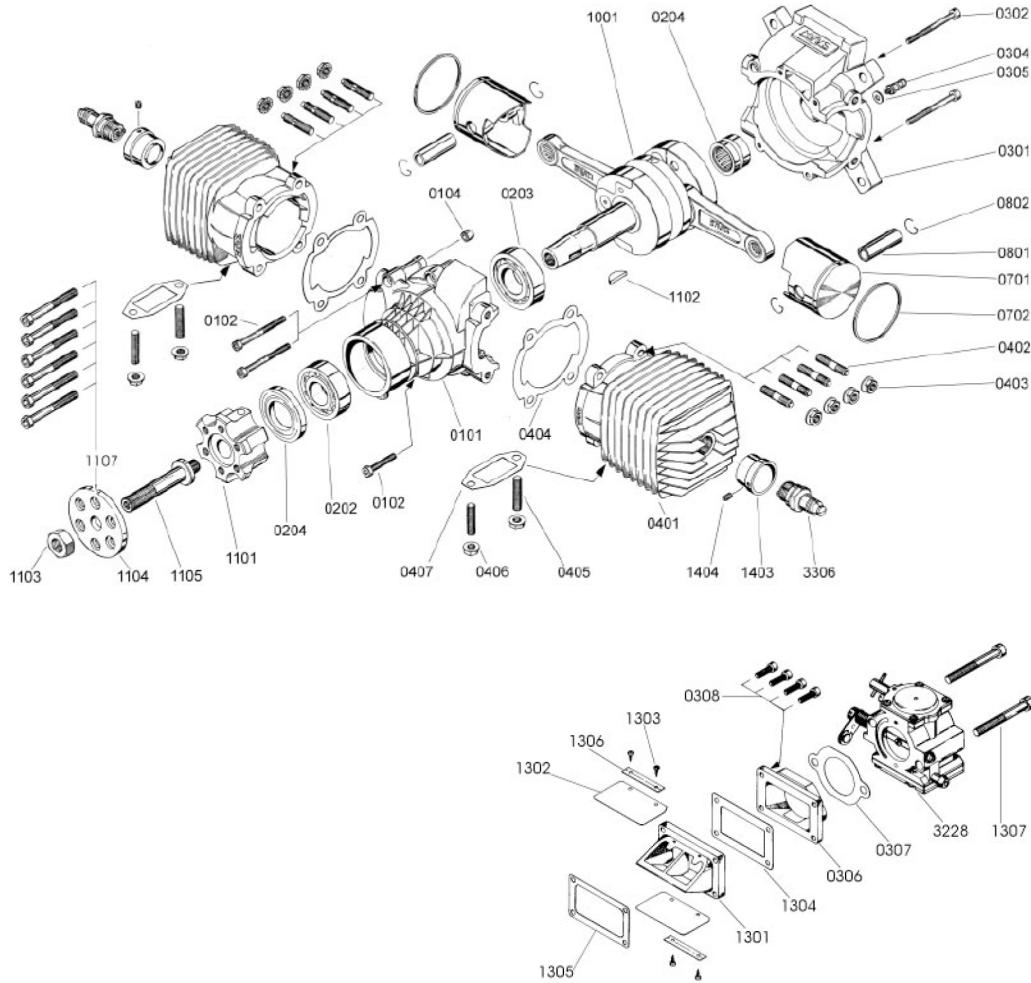

116GX Parts List

Part Number	Description	Part Number	Description
EV030100101	Crankcase	EV030101101	Drive Washer
EV030100102	Crankcase Screws Set	EV030101102	Drive Washer Key
EV030100202	Front Bearing	EV030101103	Propeller Nut
EV030100204	Packing	EV030101104	Propeller Washer
EV030100203	Rear Bearing	EV030101105	Propeller Screw
EV030100301	Rear Cover	EV030101107	Propeller Screws Set
EV030100302	Rear Cover Screws Set	EV030100306	Carburetor Flange
EV030940304	Pressure Nipple	EV030100307	Carburetor Flange Gasket
EV030100305	Pressure Nipple Gasket	EV030100308	Carburetor Flange Screws Set
EV030100401	Cylinder	EV030101301	Reed Valve Case
EV030100402	Cylinder Screws Set	EV030101302	Reed Valve
EV030100403	Cylinder Nut	EV030101303	Reed Valve Screws
EV030100404	Cylinder Gasket	EV030101304	Reed Valve Gasket-upper
EV030100405	Exhaust Screws Set	EV030101305	Reed Valve Gasket-bottom
EV030100406	Exhaust Nut	EV030101306	Reed Valve Strap
EV030100407	Exhaust Flange Gasket	EV030101307	Carburetor Screws
EV030100701	Piston	EV030103313	Electric Ignition Unit
EV030100702	Piston Ring	EV03306	Spark Plug
EV030100801	Piston Pin	EV030941403	Spark Plug Washer
EV030100802	Piston Pin Retainer	EV030941404	Locking Screw
EV030100901	Connecting Rod	EV030941405	Ignition Sensor Fixing Screws
EV030100904	Connecting Rod Washer	EV030100802	Reed Valve Assembly
EV030101001	Crankshaft	EV030103328	Carburetor Complete