
TLR334029 – Shock Conversion Set, SCTE to 22 Shocks

1

Front and Rear Shock Assembly

x2

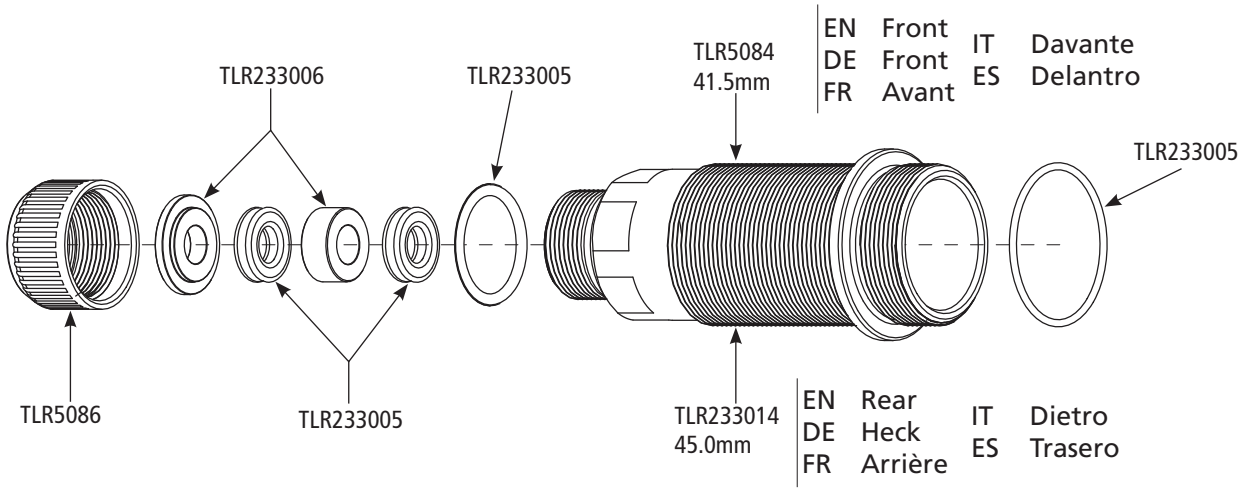

2


Front and Rear Shock Assembly


x2

TLR6105 x 8

TLR233002 x 2
3.5 x 50mm

TLR233003 x 2
3.5 x 52mm

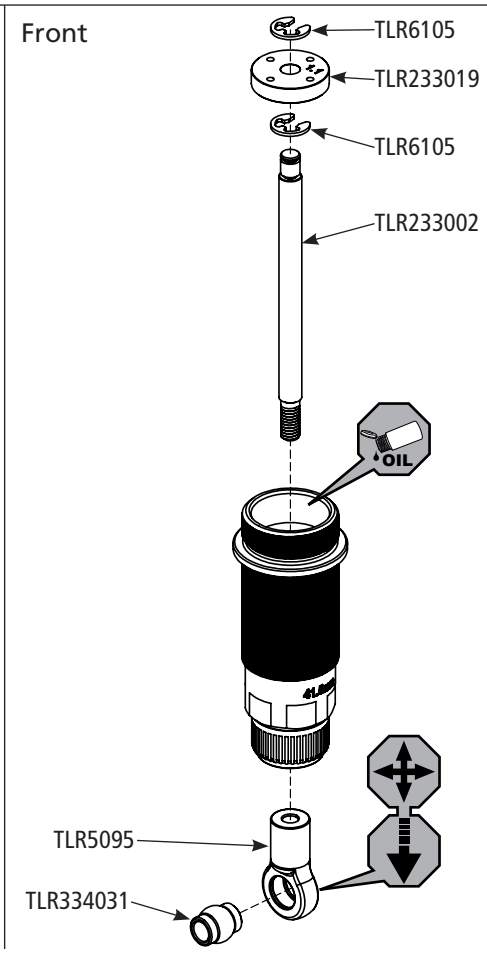

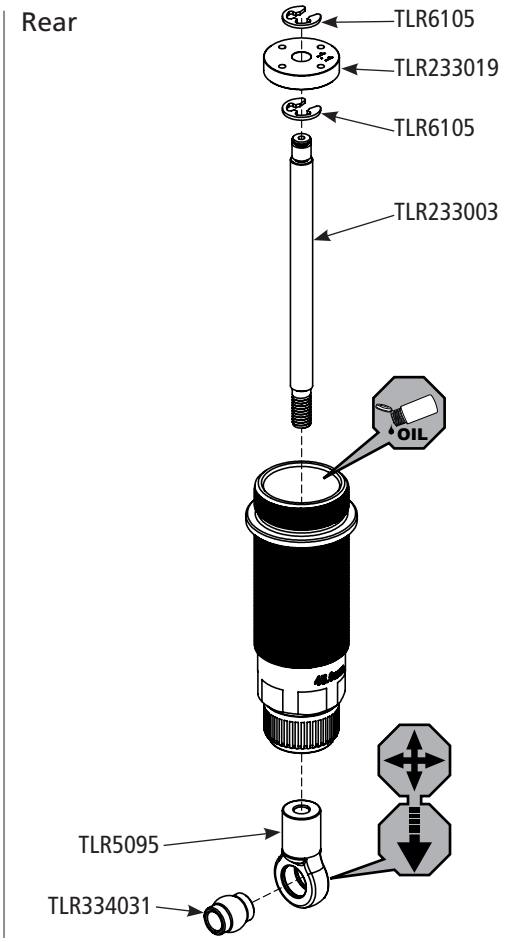

3

Front and Rear Shock Assembly


x4

TLR5066 x 4
M2.5 x 4mm

TLR5066 x 4
M2.5 x 4.2 x .2mm

Front 35wt Oil

Rear 25wt Oil

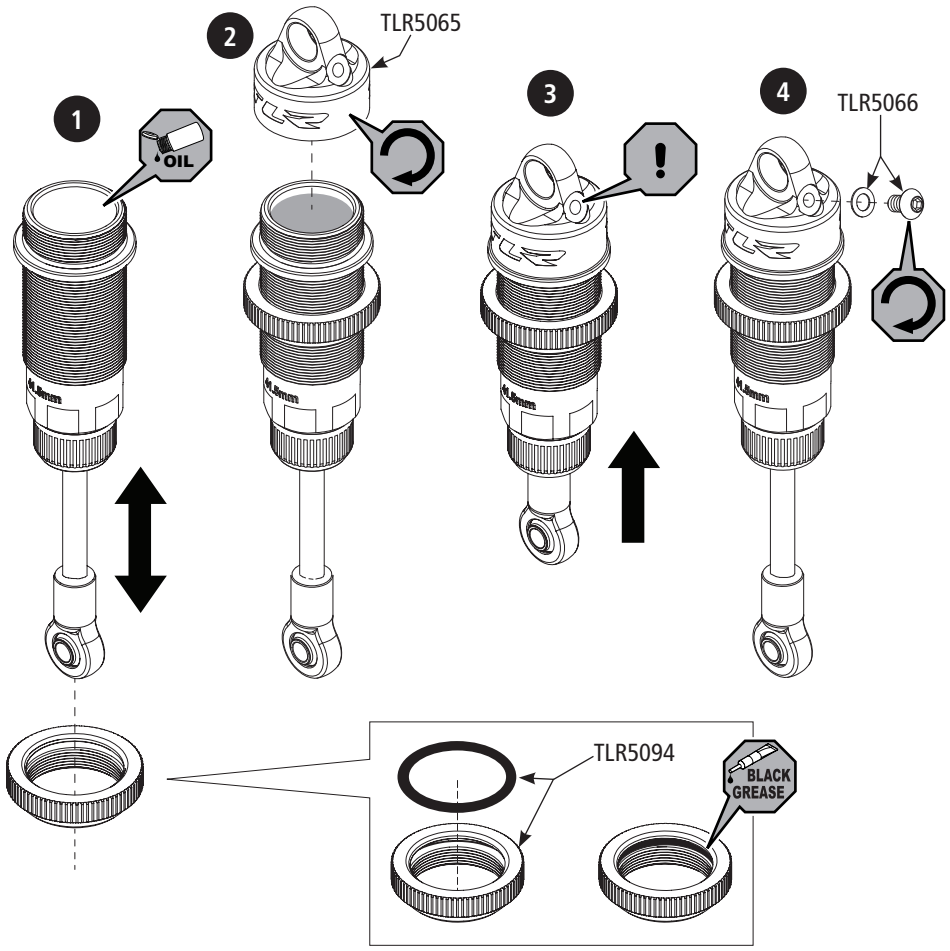


4


Spring Installation

x2

Front

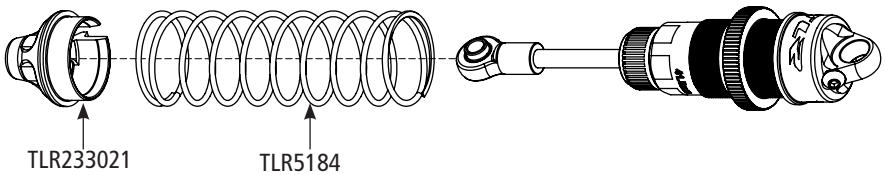

Rear

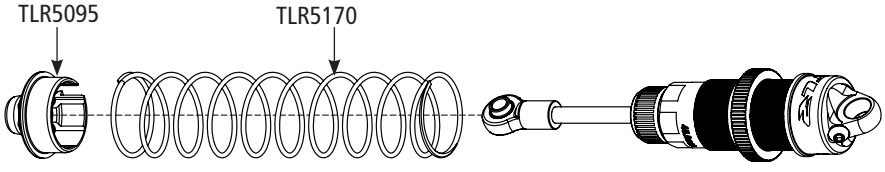

Front Shock Installation


5



LOSA6302 x 2
5-40 Lock Nut



TLR6313 x 2
M3 x 0.5 x 5.5mm

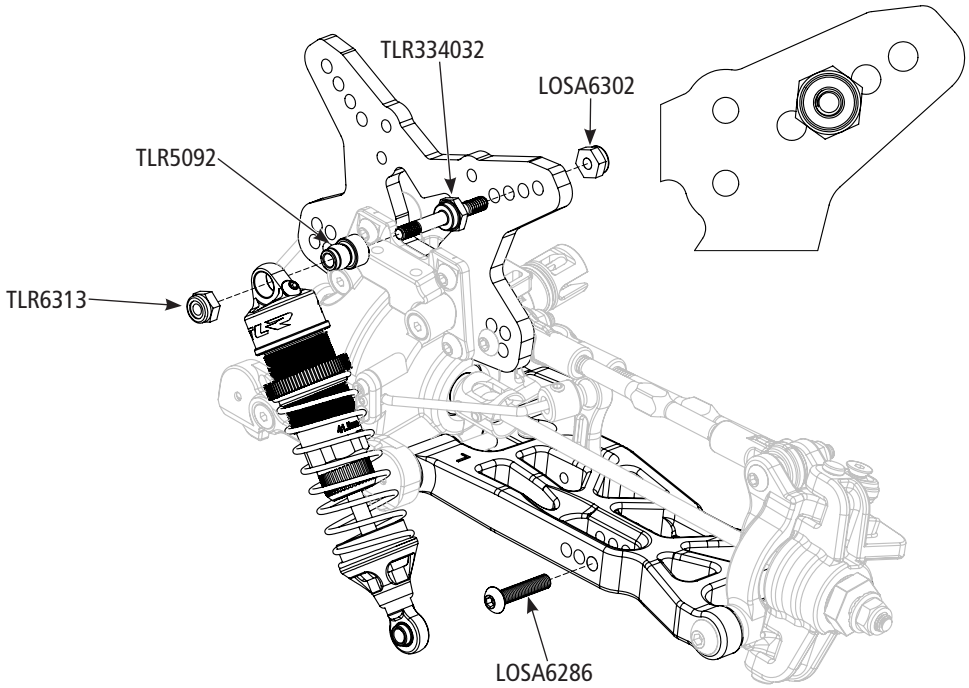

Rear Shock Tower Installation


6



LOSA6283 x 4
4-40 x 5/8"



LOSA6278 x 4
5-40 x 1/2"

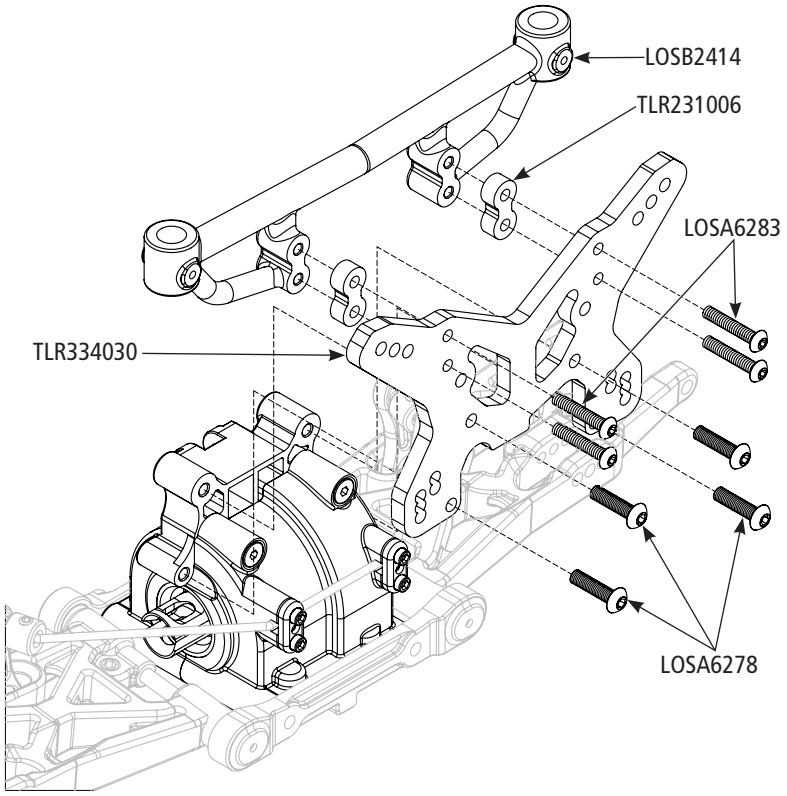

Rear Shock Installation

7




LOSA6286 x 2
5-40 x 5/8"



TLR6313 x 2
M3 x 0.5 x 5.5mm



LOSA6302 x 2
5-40 Lock Nut

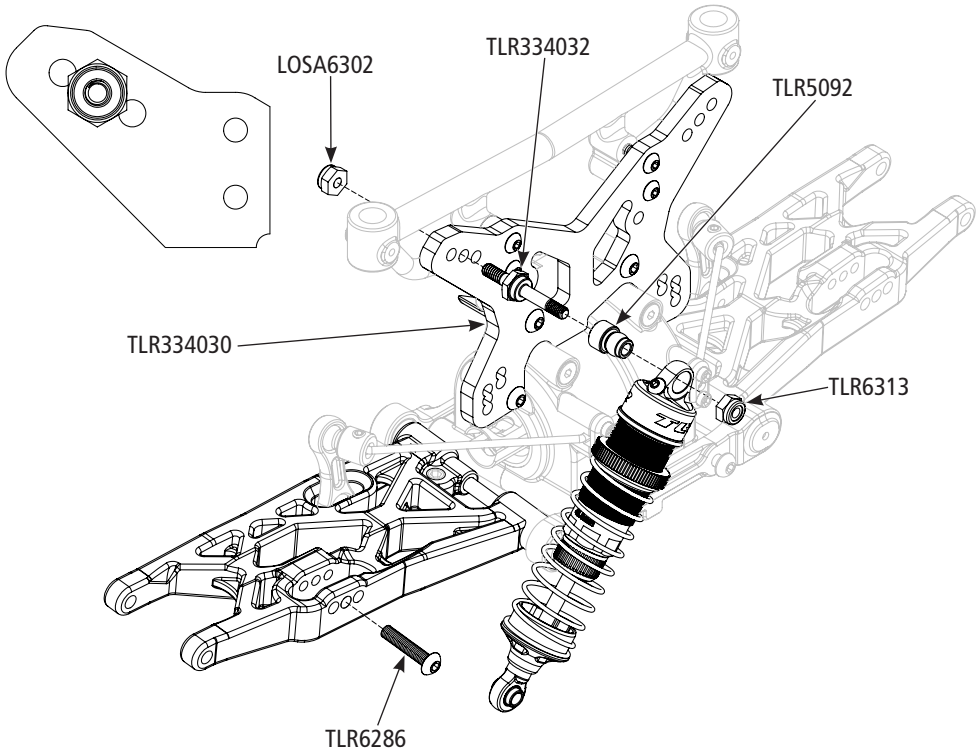

Droop Setting

8

Measure the shock length from the center of the shock mount to the center of the shock screw in the arm. Adjust using the droop screws.

Front - 89.5mm

Rear - 96.0mm

Created 10/15 49916

©2015 Horizon Hobby, LLC. Team Losi Racing, TLR, TLR-Lok and the Horizon Hobby logo are trademarks or registered trademarks of Horizon Hobby, LLC.